

## GL Broadband sv3 ADSL router Setup


### Step 1: Access the ADSL modem

1. Connect your computer with a LAN cable to a LAN port of the NTT Router  
Open a Web browser (Internet Explorer, for example).



2. Enter http://192.168.1.1 in the Address bar of the Web browser, then press the Enter key on your keyboard.

3. A Login window should open, enter user name "user" and "user" as password.

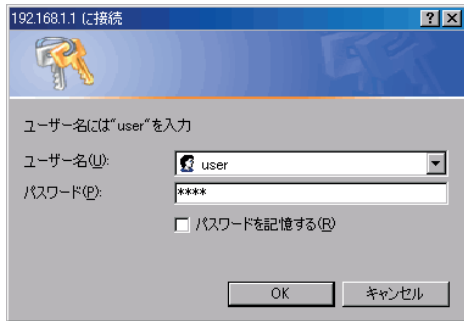

### Step 2: Open the basic setup page

4. The basic settings page will open.

5. Enter the information as in screenshot to right.

- a. Choose NTT West NTT西日本

- b. Your GLBB Internet ConnectionLogin name. includes ...@adsl.glbb.ne.jp

- c. GLBB Internet Login password. d. Renter password.

**e through i- if you attach a phone to the router, if not leave as is.**

- e. If your phone can use number display .....あり if not as in pic, .....なし.

- f. If you have caller ID choose as in pic. word end in .....する。

- g. If you don't have call waiting choose as in pic word end in ...なし.

- h. Choose as in pic to hear tone when incoming call. i. Choose as in pic.自動.

6. Click the 設定 button j.

7. Box with Japanese will pop up click the button as on right to go to reboot the router page.

8. Click the reboot button

9. You should now be online, all lights on front of your router should be on.

POWER  
ADSL  
PPP  
LAN

### 基本設定

基本的な項目についての設定を行います。

- a. フレッツ・ADSL NTT西日本

[インターネット接続関連]

- b. 接続ユーザ名 username@adsl.glbb.ne.jp

- c. 接続パスワード \*\*\*\*\*

- d. 接続パスワードの確認入力 \*\*\*\*\*

[本装置に接続して使用するIP電話、および加入電話関連]

- e. 使用する電話機 ナンバー・ディスプレイ機能なし

- f. 発信者番号通知 通知する

- g. キャッチホン契約 契約なし

- h. 割込音 標準

- i. 電話回線ダイヤル種別 自動

- j. 設定

### 基本設定

現在使用中の設定が変更されています。  
現在の設定を反映するには、再起動を  
実行してください。再起動画面へ

8. 再起動

現在の接続を一旦切断した後、機器を再起動します。

再起動